





MOUNTING INSTRUCTIONS 082.5070-1301 INSTALLATIE INSTRUCTIES 082.5070-1301

Smart Rental Frame - Barco MVD-5521 55 inch Mounting set Smart Rental Frame - Barco MVD-5521 55 inch Montage set

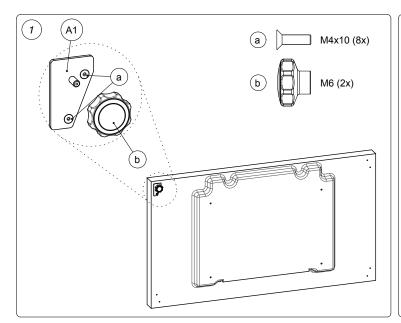

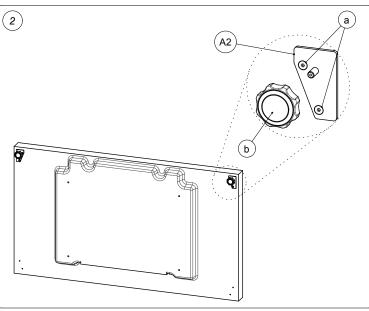

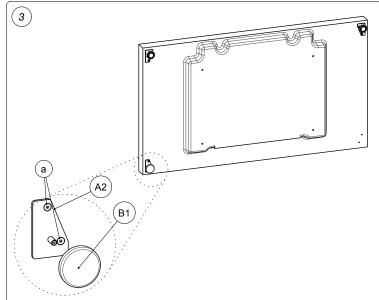

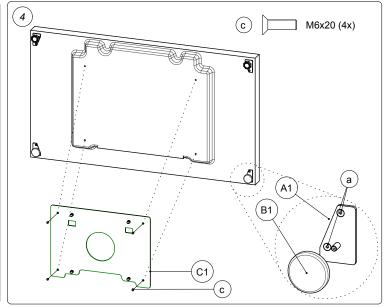

English

- 1. Fasten the alignment aid (A1) as displayed, to the screen, with two bolts (a). Then fasten the star knob (b) to the alignment aid (A1).
- 2. Fasten the alignment aid (A2) as displayed, to the screen, with two bolts (a). Then fasten the star knob (b) to the alignment aid (A1).
- 3. Fasten the alignment aid (A2) as displayed, to the screen, with two bolts (a). Then fasten the stainless steel disc (B1) **as tight as possible**, to the alignment aid (A1).
- 4. Fasten the alignment aid (A1) as displayed, to the screen, with two bolts (a). Then fasten the stainless steel disc (B1) as tight as possible, to the alignment aid (A1). Finally fasten the adapter plate (C1) with bolts (c) in the specified mounting holes of the flat screen.

Nederlands

- Monteer uitlijnhulp (A1) zoals weergegeven, op het scherm, met twee boutjes (a). Draai vervolgens de ster knop (b) op de uitlijnhulp (A1).
- 2. Monteer uitlijnhulp (A2) zoals weergegeven, op het scherm, met twee boutjes (a). Draai vervolgens de ster knop (b) op de uitlijnhulp (A1).
- 3. Monteer uitlijnhulp (A2) zoals weergegeven, op het scherm, met twee boutjes (a). Draai vervolgens RVS schijf (B1) **zo vast mogelijk aan**, op de uitlijnhulp (A1).
- 4. Monteer uitlijnhulp (A1) zoals weergegeven, op het scherm, met twee boutjes (a). Draai vervolgens RVS schijf (B1) zo vast mogelijk aan, op de uitlijnhulp (A1). Schroef tot slot de meegeleverde verloopplaat (C1) met boutjes (c) in de aangegeven bevestigingsgaten van het scherm.